

# Individual Decontamination Kit (IDK)

FG015-0004-00NA



AGENT TYPE: CWAs and TICs

DESIGN FOR: Decontamination and Neutralization

DECON TYPE: Immediate, Emergency

SURFACE TYPES: Equipment, Hard, Skin\* (mitts)

REQUIRE USERS: 1 User

SURFACE AREA: Approximate 2-3 m<sup>2</sup>



Includes:


- 2 x FAST-ACT Decon Mitts
- 2 x FAST-ACT Powder Bottle Packs
- 2 x All Hazard Wipes
- 1 x Kit Carry Case
- Plus assistive accessories




## FAST-ACT® Individual Decontamination Kit:

The kit is designed to perform emergency decontamination on 1 contaminated individual (exposed to chemical contamination), the contaminated area in the immediate vicinity of the individual, and individual equipment.


Capability of the kit will vary depending on chemical contamination density, and chemical compound.

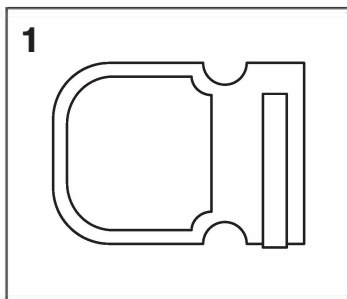


1 Utilize the FAST-ACT® Decon Mitts to perform immediate and emergency decontamination by following the device user manual on skin\* and surfaces not to exceed 2 m<sup>2</sup>.

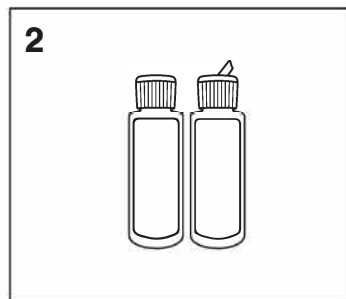

2 Utilize the FAST-ACT® Powder Bottle Pack to apply additional FAST-ACT® sorbent powder to contaminated surfaces. The FAST-ACT® Decon Mitt can be used to spread the powder and perform emergency decontamination of surfaces. Provide agitation, when possible, to full absorb liquid contamination to maximize neutralization.

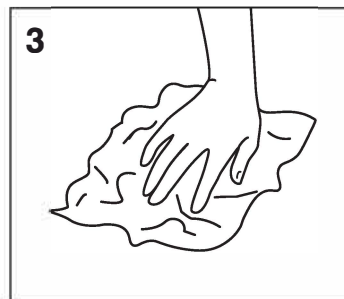

3 Utilize the All Hazard Wipe to remove any remaining trace contamination from the treated surfaces.

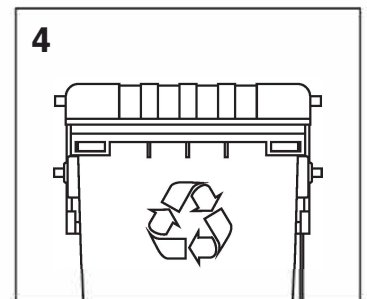

4 Dispose of FAST-ACT® devices in accordance with local requirements.

\* FAST-ACT Decon Mitt is a Class I medical device for skin decontamination in Australia and the European Union.